CAR WARNING LIGHT SYMBOLS

Warning Symbols



Oil Pressure Warning Light



Warning Light

Engine Temperature



Warning Light



Warning Light







Traction Control



Tire Pressure

(P)



Steering Wheel O/D

OFF

Overdrive



Service Vehicle







Reduced Power

Safety Symbols



Press Clutch Pedal

ESP Fault/Traction



Press Brake Pedal

(1)





Power Steering Warning Light



Clogged Air Filter



Adaptive Suspension 4 Wheel Drive (4WD)

Child Safety Check Engine or Malfunction Indicator Light (MIL) Converter Warning



Airbag

CHANGE ENGINE OIL

Oil Change





Icy Road Warning Light

**\







Lighting Symbols



System (ABS)

Low Beam



All Wheel Drive

(AWD/4WD)



Airbag

High Beam



Headlight





LOCK Indicator Light

Exterior Light



Suspension

Auto High Beam



Side Light



Rear Fog Lights



Common Symbols









Fuel Level



Not in Vehicle



Hood/Bonnet Open



Hazard Lights



∌00€

Direction/Signal



on Ramp

Advanced Feature Symbols





Convertible Roof Warning Light



Rear Spoiler



Brake Hold Blind Spot Indicator Light Indicator Light



Parking with



Auto Windscreen Wiping





Automatic Emergency Braking (AEB)



Battery Low

Adaptive Cruise





Start/Stop

Warning Light

 (\mathbf{A})



Temperature

ECO



Diesel-powered Vehicle Symbols









AdBlue

Water Fluid